



The diagram refers to the using of the crane in sea state "0", or in a harbour condition.

If the crane is used in Off-shore state with more heavy sea state conditions, it is necessary to consult the manufacturer in order to establish the new capacities or the reduction parameters.